

MANUAL FOR INSTALLATION, ASSEMBLY, MAINTENANCE AND USE

Warranty Certificate

VIGAS 18 DPA with AK4000 control





Content

Со	ntent	Page
De	claration of conformity	3
1.	Technical description	4
2.	Technical data	5
3.	AK4000 control description	7
4.	Boiler VIGAS 18 DPA fuel PELLETS	9
5.	Boiler VIGAS 18 DPA fuel WOOD	12
6.	Water outlet temperature setting	18
7.	Time setting	18
8.	Hardware and software information	18
9.	Error notification	18
10.	Configuration set up using PIN 0000	19
11.	Operating instruction	24
12.	Boiler maintenance and repairs	27
13.	Boiler accessories and assembly	29
14.	List of servise centers	30
15.	Problems, causes and solutions	30
16.	Installation instructions	32
17.	Wiring diagram	35
	Warranty Čertificate	37
	Commissioning Certificate VIGAS 18 DPA	37

EC DECLARATION OF CONFORMITY Issued according to § 12 sec. 3 let. a) Act No. 264/1999 Statute and 97 / 23 EC

WE, Pavel Vigaš - VIMAR,

M. Čulena 25 974 11 Banská Bystrica SLOVAKIA VAT no.: SK 1020548001

hereby declare on our full responsibility, that reffered products comply with technical requirements, products are safe if terms of use are followed. We secured all actions, which continuously establish complaince, provide conformity of referred products with technical documentation within specifications and legal requirements. If any changes occur on the device without permission of producer, this statement loses its validdity.

Product: Warm water boiler VIGAS 18 DPA with AK 4000 control

Type: VIGAS 18 DPA

Producer: Pavel Vigaš - VIMAR M. Čulena 25, 974 11 Banská Bystrica, SLOVAKIA

Competent statutory codes (CSC)

CSC no. 576/2002 Statute – Pressure equipment Directive (97/23/EC) CSC no. 308/2004 Statute – Low voltage electric devices (2006/95/ES) CSC no. 194/2005 Statute – Electromagnetic Compatibility Directive EMC (2004/108/EC)

Used harmonized standards for CE marking

STN EN 303-5: 2012; STN EN 60335-1: 2012; STN EN 60335-2-102/A1 : 2010 STN EN 61000-6-3/A1/AC; STN EN 55014-1/A2 : 2012; STN EN 61000-3-2/A2: 2010 STN EN 61000-3-3: 2014; STN EN 61000-6-2

Additional date: Certificates

Conformity Certificate no.00030/104/2/2009, Conformity Certificate on Pressure Equipment Directive no.97/23EC no.812990019, Test report TGM- VA HL 7325 TGM Wien.

CE was proceeded according to § 12, sec. 3a) Act no. 264/1999 Statute per amendments.

Issued in: Banská Bystrica

Statutory name: VIGAŠ Pavel

Date of issue: 9.6.2015

Title: owner

Signature:

1. TECHNICAL DESCRIPTION

Combined warm water boiler VIGAS 18DPA offers two different systems of fuel combustion. Wood fuel combustion provides effective way applied with all Vigas boilers. Pellet fuel heating is provided by classic burning process on fire grate, made of heat resistant steel, where pellets are delivered by screw feeder. Boiler VIGAS 18 DPA is designed to burn pellets with diameter of 6 mm and lenght up to 35mm, as well as dry wood materials from sawdust to wood logs of 44 cm long, with max. diameter 20 cm. Sawdust, woodchips and cuttings are recommended to burn together with wood logs.

Boilers are welded from 4 and 6 mm steel sheets. Inner boiler sheets, which are in contact with boiler gases are 6 mm thick, others are made of 4 mm steel. The heat exchanger is welded from 57 x 5 mm steel pipes. External casing of is made of 0,8 mm steel sheets. Heat insulation of the boiler is formed by 20-50 mm mineral wool. The combustion gas is discharged through steel flue gas into the chimney. The pellet container is designed from 1,5 mm steel sheet and its volume is 250 I.The integral components of the boiler include: front gear unit, electric ignition unit, security tourniquet, air distributor with servo and fan, chimney temperature sensor, ultrasound sensor to detect level of pellets. Internal space consists of combustion chamber, where fuel is dried and combusted. Produced wood gas is carried through nozzle into combustion chamber, where it burns with support od secondary air.

Pellets are led directly to combustion chamber by accurate dosing from container during combustion with assistance or regulated air supply. Furthermore, the flue gases are led to double-row heat exchanger, where intensively cooling down untill reaching the flue gas. Unburned ashes and waste is seated in the combustion chamber, which is advised to be clean approximately once a week. Boiler offers simple maintenance due to AK4000 control, located on the top of the boiler.

Control AK4000 offers and permits following actions:

- **d** to control heating temperature reached by changing of fan speed using by PID regulator
- □ to control and manage operation of pellet feeeding device
- to read water boiler temperature
- to read volume of pellets in the container
- to read temperature of flue gases
- □ to read motor temperature of pellet feeding device
- □ to connect and control the discharge fan
- □ to connect and control circulation pump
- □ to connect and control room thermostat
- □ to connect extended regulation (Expander AK 4000) via BH BUS
- □ to connect modul AK 4000M for data back-up and possible evaluation via PC
- □ option for graphic view of hydraulic schemas with connection per requirements

SAFETY FEATURES

Boiler is supplied with STB safety, which disconnects the boiler fan to avoid boiler overheating above 100 °C and it is equipped with safety cooling exchanger according to STN EN 303/5: 2012. Manufacturer recommends to purchase Honeywell TS131 3/4" safety valve - to be assembled to the safety cooling exchanger. The boiler is equipped with a safety cell feeder (tourniquett) driven by chain transmission to avoid pellet re-ignition inside container. In case of power failure or device error, there is always security air gap between the container and pellet combustion chamber which prevents ignition of the pellets in the container. To avoid engine gear damage by possible feeding screw blockage or tourniquet blockage, the boiler is equipped with a safety thermometer that detects the temperature of the engine and if temperature is 80 °C, engine will shut down.

VIGAS 18 DPA

2. TECHNICAL DATA



Chart 1 Warm water boiler **VIGAS 18 DPA** Combined boiler VIGAS 18 DPA WOOD/PELLETS Nominal boiler output kW 24 / 18 Boiler class acc. EN 303-5:2012 5 bar 3 Max. operating pressure Fuel WOOD Max. wood moisture 20% of heating value. 15 MJ/kg Pellets diameter 6 mm, lenght 40 mm (16,5 - 19 MJ/kg) **Fuel PELLETS** Standard: ÖNORM M 7135, DIN 51731, EN plus A1 kW Power range WOOD 8 - 24 kW Power range PELLETS 1,8 - 18 Fuel consumption with nominal output kg/hrs 6,3/4,5 WOOD/PELLETS mBar 0,15 - 0,20 Chimney draught Minimum height /chimney diameter 8/0,16 m Temperature setting option °C 70 - 85 Fuel WOOD **Fuel PELLET** 70 - 85 °C Weight kg 480 75 Water volume I Average gases temperature Nominal power (Wood)/(Pellets) °C 210/160 Minimum power (Wood)/(Pellets) 105/90 °C Wood chamber capacity I 105 Door dimension (w-h) mm 435 - 255 Wood chamber dimension Depth mm 480 Height 500 mm Width 380 mm 35 Max. weight of wood fuel kg 250 Pellet container capacity 1 170 Max. weight of pellet fuel kg dB Noise level 45.5 W 1800 Max. el. power during ignition W 150 Max. el. input during burning 230ACV/50 V/Hz Voltage/ frequency Pressure water loss : 9,97 ∆t 10 °C mBar mBar 1,15 ∆t 20 °C Burning time at nominal power Wood hours 6 Pellets hours 35 Cooling heat exchanger °C 4 - 15water temperature inlet water pressure inlet bar min. 1 – max. 4 SAFETY Drain valve HONEYWELL TS 131 ³/₄" Release temperature 95 °C STB fuse, release temperature 100 °C (tolerance: $-6 \circ C - 0 \circ C$) 0,034 - 0,047Flue gas mass flow



600

Pic.3

2.1 DIMENSION CHART AND THE POSITION OF SAFETY PLATE TO ENSURE PROTECTION **OF INFLAMMABLE FLOORING**



2.2 BOILER SCHEMATICS

Schema VIGAS 18 DPA



- 10. Secondary air shutter
- 11. Handle
- 12. Fire clay bricks 13. Bottom door

- 24. Pellet burner
- 25. Fire proof lining 26. Secondary air
- 27. Combustion chamber
- 38. Ultrasound pellet sensor
- 39. Servo-drive
- 40. Safety temperature sensor



3. DESCRIPTION OF AK 4000 CONTROL

3.1 Safety instructions

- Before you plug-in the power cord, please check all protective cover panels.
- Avoid any contact of power cord with hot parts of the boiler (e.g. gas flue)
- Make sure that upper insulation under the cover panel remains dry (risk of short circuit if damp)
- Do not use any violent tow on the power cord.
- Always disconnect the power cord, when new electrical devices are being installed to the boiler (e.g. room thermostat, discharge fan, circulation pump).
- . Do not remove protective cover panels, in particular the fan cover, when boiler in servise.
- Check, whether voltage on the label is the same as your distribution network.
- Always follow safety operation manual.

3.2 Connection to power supply

Control AK 4000 presents integral part of VIGAS boilers. The control will be connected when power cord is plugged into a 220/230V power supply. The display is active when power cord is plugged-in (Pic.4).



Pic.4

3.3 Operating conditions

Control AK 4000 is designed for operation with area temperature between +5 and +45 °C. The control cannot be used in moist environment or in direct sunlight.

3.4 Maintenance of AK 4000 control

Keep in clean and dust free environment. Anti-static cloth or wet wipes are recommended to remove dust or impurities from metal cover or control panel.

3.5 Control panel

Electronic control panel is equipped with buttons, display including symbols. Further information is available in the following chapters of the manual. The button options have combined functions, it depends on provided text and individual boiler configuration setting.





Graphic information





- 1. Real time image.
- 2. Information line current boiler figures shown Change \blacktriangle or \checkmark .
- 3. Information about discharge fan and gas sensor.
- 4. Information about nominal power, when boiler is off.

- 1. Graphic display 128 x 64 pixels
- 2. Button ◀ with functions, ENTER
- 3. Button \blacktriangle with functions,
- 4. Button ▶ with functions, EXIT menu (ESC),
- 5. Button (ENTER) with functions,
- 6. LED light (green OK, red ERROR),
- 7. Button ▼ with functions.

Line information (chap.10.5)



- 5. Graphic information about hydraulic schema
- 6. Boiler status information.
- 7. Pellet feeder information.
- 8. Symbols
- 9. Set figures
- 10. Currrent figures

3.6 LIST OF SYMBOLS

Boiler		Accumulator tank		External boiler	
Boiler switched on	ON	DUOMIX	*	Heating circuit	
Boiler switched off	OFF	Valve with servodrive	0	Room thermostat	
Start fire	ØN ON	Pump	\bigcirc	3-way thermo valve	- <u>+</u>
Burning	73 °C	Discharge fan		LADOMAT	★
Burn out	52 °C	Lambda sonda	λ	Floor heating	
End of burning	END	Thermometer	Т	Fan perform. modification	∆ি
Boiler power PELLETS	≟ 60%	External thermometer	TE	Boiler power WOOD	ି 45%
Ignition mode		Screw feeder		Pellet volume indicator	
Room thermostat decay		Indication figure error	x	Temperature of feeder device	
Ultrasound pellet sensor		Fuel change Wood≁ Pellets	ً∢ ھ	Boiler power change	△≞
Fuel WOOD	el WOOD Minimum gas value		Rend	Maximum gas value	∼ nax
Fuel PELLETS		Servo position fuel WOOD		Servo position fuel PELLET	<u> 彩</u>
Temperature setting		Parameters setting		Time setting	
Error notifications		Programm	Prog	Configuration data	
Service settings		Memory modul		Motion control	
Schema options	7.10 SLLOT	Installation data		View option	7.32 Q sorc Algorithm Satter

4



Boiler VIGAS 18 DPA offeres possibility, that during fuel change from pellets to wood or wood to pellets, it is not necessary to perform any technical modifications on the boiler body. It is only required to choose type of fuel on the display of AK 4000 control. After selecting the fuel type, servomotor driven shutter will automatically move to desired position (pic.3/6). Boiler design and air control enables automatic transition of fuel from "WOOD" to "PELLETS", after "WOOD" fuel has burned out.

Quick choice selection of fuel type using round button



4.1 VIGAS boiler control using fuel - PELLETS

4.1.1 Switch on the boiler



Symbol "OFF" will appear, as shown on the picture, if boiler is switched off, by pressing middle button "ENTER", round button pictogram appears.





Using button \checkmark select fuel pellets \mathcal{A}^{\bullet} or fuel wood \mathcal{A}^{\bullet} . In case, discharge fan is used, see (chap.10.1.3) shown as \square this button +60 will switch on discharge fan for 60 seconds. It is used, for example during boiler clean up, it will minimize dust infiltration in the boiler room area.

By pressing middle button "ENTER" boiler gets into automatic pellet ignition.

4.1.2 Boiler switched on - pellet ignition mode





Ignition mode shows symbol "ON". It is automatic process supported by chimney temperature monitoring.

Discription of ignition:

- 1. Pump on, monitoring of current chimney gas temperature.
- 2. Ignition coil on 2. Ign
- 3. Screw feeder on **D**.
- 4. Finishing ignition mode and switch to burning mode will start, when current gas temperature exceeds sensored gas temperature over 3 °C. The boiler will switch off, if this condition is not realized, indicated by symbol "END" and pellets ignition error.

Ingniton pellets error:

- Clean the burner (pic.3/24) too much ash on the burner,
- Check pellet volume in the container,
- Check igniton coil function (pic.3/35).



4.1.3 Boiler switched on – burning mode



When igniton porceeds well, boiler gets into burning mode. Condition is displayed by change "ON" \rightarrow "52 °C". In the burning mode boiler keeps required temperature by "PID" power regulator. Current power of the boiler is displayed by % symbol and number, e.g. "=60%". Pump operates continuously since boiler is ON.

4.1.4 Boiler shutdown (automatic)







Inside boiler container is placed ultrasound sensor, which detects pellet level. If pellets are above sensor level (container is full), this condition is displayed by symbol "

If pellets are below sensor level (container is half-empty), this condition is displayed by symbol "". Simultaneously, information line shows remaining time period for boiler to shutdown. This condition is displayed by empty container symbol """ and sign "END".

4.1.5 Boiler shutdown (manually)



Pressing "ENTER" display offers round button. Pressing button ◀ boiler will shut down. After shutdown, the blowing fan is switched on. During 60s period pellet burner is being cooled down. By pressing ⊠ round button will disappear.

4.2 Parametres setting for fuel - PELLETS

To change setting press **"ENTER**" for 2 seconds, in any boiler mode, by pressing button ▲. Parametres setting depends on type of the boiler and its configuration.



By pressing buttons $\blacktriangle \lor$ choose parameter to be changed and pressing **"ENTER**" figure starts flashing. Using $\blacktriangle \lor$ buttons select required figure and repeatedly press **"ENTER**".

4.2.1 Boiler power adjustment

H Control AK 4000		∆≞	Power adjustment $\Delta =$ is possible to choose when using lower quality pellets. This figure can be adjusted from 0 to +3. Figure is displayed by increased maximum boiler power. 0 = 100%, 1 = 106%, 2 = 112%, 3 = 120%. Each level corresponds to an increased time of pellet feeding and amount of air. Using adjustment "+3" and pellets EN Plus A1 boiler
-------------------	--	----	--

can reach nominal power of 21kW.

4.2.2 Fan adjustment



4.2.3 Adjustment of automatic fuel transfer from "wood" to fuel "pellets"



Boiler VIGAS 18 DPA is semiautomatic. Selecting option "AUTO" after fuel "WOOD" has burned out and gas temperature reached rend (see chap. 5.3.2) burning will continue with fuel "PELLETS" Mode "AUTO" requires shutdown temperature rend 50 °C Mode "OFF" - boiler is switched off, if required temperature achieved rend.

4.2.4 Adjustment of discharge fan speed

BH Control AK 4000	[⊠] on	In case of installation and selection of discharge fan (see chap.10.1.3), there is possibility using it to increase chimney effectivity by permanent running. Possibility to adjust speed from 30% up to 100% or completely shutdown to "OFF".
--------------------	--------	--

-ÿ-

4.2.5 Display brightness adjustment



Select figure for display brightness. This figure is possible to adjust from 0 to 100.

4.2.6 Display contrast adjustment





Select contrast figure of the display. This figure is possible to adjust from 16 to 24.

4.2.7 Adjustment of scrolling information line



5. BOILER VIGAS 18 DPA fuel WOOD

Quick choice selection of fuel type using round button



5.1 Boiler control VIGAS without discharge fan

Discharge fan is an additional device for VIGAS boiler. It prevents smoke leakage into the area of boiler room, while filling up the boiler with fuel. See chap.13.3.

5.1.1 Boiler switch on



When boiler is in the "OFF" mode, by pressing middle button "ENTER" round button symbol will appear.

By pressing ▼ select fuel pellet "Ét" or fuel wood "D". When burning wood, please select option "WOOD" Caution:

Before pressing "ENTER" it is necessary to start fire inside boiler, following chap.11.4.

5.1.2 Boiler switched on – heating-up mode



Boiler is in heating-up mode, when exhaust gas temperature is lower than adjusted minimum temperature. Minimum and maximum temperature is possible to adjust by selecting boiler figures. Standard minimum exhaust gas temperature is adjusted to 90°C and maximum is 220°C. Pump during heating - up mode operates by **pulse** depending on water temperature!



5.1.3 Boiler ON – burning mode



Burning mode of the boiler starts, when shutdown exhaust gas temperature gets to (\checkmark end) +10 °C. Pump operates by pulse. If pump sign is flashing, pump works. Boiler reacts to room thermostat only while in heating process, once room thermostat is off boiler slowly reduces power.

5.1.4 Adding fuel, boiler shutdown (manually)



Use graphic control. Driver will appear after pressing shortly middle button ENTER. Graphic driver offers option to shutdow the boiler, option to add fuel or to cancel the driver.









By pressing " blowing fan will shut down. By pushing rod open the chimney flap and than open the upper door. Add required amount of fuel. After fuel is added close upper door and close flap by pulling rod (chap. 11.4). Press " to finish adding fuel. Blowing fan will start automatically.





Choose one option

5.1.5 Boiler shutdown (automatic), switch to mode "PELLET"



When exhaust gas temperature drops down below desired temperature (\checkmark end) boiler will shut down with symbol "END" on the display. If you selected automatic switch from "WOOD" fuel to "PELLETS" $\gg \cancel{N}$, boiler will be switched on – pellet ignition mode and boiler continues running to the desired temperature. Advice:

If selecting automatic switch $\mathscr{D} \rightarrow \mathscr{E}$ it is beneficial to set (\checkmark end) below 60 °C, this will burn out "WOOD" fuel completely.



Fuel - WOOD

5.2 VIGAS BOILER CONTROL with discharge fan

Discharge fan is optional accessory for VIGAS boiler. Discharge fan assembly provides increased comfort during heating-up and refilling mode. It helps to reduce smoke from boiler room area. When lighting up the boiler it will help to create fire base quickly. See chap. 13.3.

Upozornenie:

chapter 11.4.

5.2.1 Boiler switch on



When boiler in "OFF" mode (see display), by short pressing of middle button "ENTER" graphic driver can be recalled.

Before pressing "ENTER" it is necessary to heat-up the boiler, follow

By pressing ▼ choose fuel pellets "Ž" or fuel wood "Д".



BH Control AK 4000

Choose one option						
+60	To start discharge fan for 60 s (used during heating-up)					
ON	Switch on					
X	Cancel display driver					
<u>A</u>	Fuel "WOOD"					
▲ ▼ Change of indicated figure						



Select "+60" new graphic driver will appear. Running time of discharge							
fan can be	fan can be viewed in the upper corner.						
+60	+60 You can add extra 60s, maximum 360s						
ON	Switch on						
0 Discharge fan switched off							
Fuel "WOOD"							
▲ ▼ Change of indicated figure							

5.2.2 Boiler on – heat-up mode



By pressing "ON" the discharge fan will switch off and boiler will go to heat-up mode. If boiler exhaust gas temperature is lower than set minimum exhaust gas temperature. (\checkmark end) boiler will stay in this mode. Minimum and maximum exhaust gas temperature can be modified in parametres settings. Minimum standard gas temperature is set to 90 °C and maximum to 220 °C. The pump works by pulse in this mode, according to water boiler temperature.

5.2.3 Boiler on – burning mode



The burning mode is activated when shutdown temperature of exhaust gas is passed (\checkmark end) +10 °C. The pump works by pulse in this mode. If pump symbol is flashing, pump works. Boiler reacts to the room thermostat, after thermostat is switched off, boiler power gradually decreases.

5.2.4 Fuel refill, boiler shutdown (manual),











Use graphic driver. To recall display driver press middle ENTER button. The graphic driver offers options: switch off the boiler, refill the boiler or cancel driver.





By pressing " boiler switches off and discharge fan will start running for 300 s. The time is indicated in the upper left corner. By pressing +60 running time of the discharge fan can be exceeded. Using rod open the chimney flap, than open upper door. Add required amont of fuel. When finished, close upper door and chimney flap. By pressing "0" discharge fan will be switched off. By pressing "" refill wil be done, discharge fan will switch off automatically and blower fan starts.

5.2.5 Boiler shutdown (automatic)





Notification:

continues heating.

If selecting automatic transfer $\mathscr{D} \rightarrow \mathscr{B}$ it is advised to choose (\checkmark end) below 60 °C, for fuel "WOOD" to burn out completely.

When exhaust gas temperature drops down under set temperature

(\checkmark end) the boiler will automatically shutdown. Sign "END" will appear on the display. If you had selected automatic transfer from "WOOD" to "PELLETS" $\gg \neq \&$, boiler will start – with pellet ignition mode and boiler

5.3 PARAMETERS SETTING

Fuel - WOOD

To get to parametres setting mode press **"ENTER"** for 2 seconds, and press **▲**button. Parameter setting depends on the boiler type and its configuration.



By pressing ▲ ▼ select parameter, you need to change and press **"ENTER"**, figure starts flashing. By pressing ▲ ▼ select required figure and press **"ENTER"**.

BH Control

{ end ≤♂ ♂ min

VGAS

5.3.1 Maximum chimney temperature setting



By choosing maximum exhaust gas temperature, fan speed will be reduced. Temperature setting is available between 130 °C to 320 °C. Temperature setting depends on wood quality and chimney draft. Recommended value is 220 °C.

5.3.2 Boiler shutdown temperature setting (shutdown temperature)

AK 4000	∕r €end	Select exhaust gas temperature, boiler and pump will shutdown automatically. Temperature setting is available between 20°C and 130 °C. By selected temperature is possible to influence size of fire base for next heat up mode. Low figure will activate complete burn out of fuel or high temperature will produce too much ash in the chamber. If you are using automatic transfer mode "WOOD" to "PELLETS" $\longrightarrow \Rightarrow \&$, boiler will start – with pellet ignition mode and boiler will continue heating. Recommended value is below 60 °C.
---------	---------	---

5.3.3 Fan power setting

BH Control AK 4000 Imax 220°C Imax 90°C Imax 0 Imax 0	∆67	By increasing or reducing this figure., boiler power can be changed. Value is possible to select between -3 and +3. One degree means approx. 10% of boiler power. Figure "0" corresponds to boiler rated power. During mid-season period is advised to decrease this value.
--	-----	--

5.3.4 Minimum fan power setting



5.3.5 Fuel type setting: PELLET - WOOD





5.3.6 Automatic switch from "WOOD" to "PELLETS" setting

<u>R</u>I)





澎	VIGAS 18DPA is semiautomatic. Choosing option "AUTO" after wood burns out and required exhaust temperature achieved red (see chap. 5.3.2) boiler will automatically switch to fuel "PELLETS" and continue burning. Mode "AUTO" requires shutdown temperature red 50 °C. Boiler will be switched off after reaching shutdown temperature red.
---	--

5.3.7 Discharge fan speed setting

BH Control AK 4000		In case, the boiler is equipped with discharge fan (see
Image: Constraint of the second se	🗵 on	chap.10.1.3), it can be used in permanent mode to increase chimney effectiveness. It is possible to control speed between 30% and 100% or complete shut down by "OFF" symbol.

5.3.8 Nastavenie jasu displeja



5.3.9 Nastavenie kontrastu displeja





Select contrast figure of the display. This figure is possible to adjust from 16 to 24.

5.3.10 Nastavenie rolovania informačného riadku

BH Control AK 4000 ※ 75 0 24 Roll no	Roll	By pressing " yes " information line offers current boiler figures shown on display (pic.7), e.g. boiler power, boiler temperature, gas temperature, etc. By pressing " no " choose figures for information line ▲ ▼.



6. BOILER TEMPERATURE SETTING OF OUTPUT WATER

By pressing **"ENTER**" button for 2 seconds at any time. Basic configuration of the boiler offers heating temperature setting from **70** °C to **85** °C.



7. TIME SETTING

Please set-up time and date when boiler firstly plugged in. Time is indicated in the upper left corner of the display. To recall parameter setting press **"ENTER**" button at any time, then press ▲ button twice.





By pressing "ENTER" figure starts flashing. Use ▲ ▼ buttons to select correct time and date. Mon - Monday,Tue – Tuesday, Wed – Wednesday, Thu – Thursday, Fri – Friday, Sat – Saturday, Sun – Sunday. Warning: During electricity short-cut time stops.

8. HARDWARE AND SOFTWARE INFORMATION

To recall information press **"ENTER**" at any time and press ▼ button. Confirm by pressing "ENTER". Use buttons ▲ ▼ to choose modul and confirm by pressing "ENTER". display will provide information regarding selected module: AK4000D – Display, AK4000S – Power board unit, AK4000L – Lambda board module, AK4000EP – Pellet expander.



9. ERROR MESSAGES

To recall error message press **"ENTER**" button at any time and press button ▼ two times. Confirm by pressing "ENTER" button and error message appears on the display.



Error free running: Green LED light Error: Red LED light

Error notifictions and solutions are described in chapter "15. PROBLEMS, CAUSES, SOLUTIONS".



9.1 STB error (boiler overheated)



"STB" failure is caused by boiler overheating. Aktivovala sa tepelná poistka. When this happens, the thermal fuse is activated and fan is disconnected from the power supply (pic. 3/7). Boiler can be only switched on if STB fuse is reset manually (picture), when boiler temperature drops down to **60°C**. To switch on the boiler press "ENTER" button.



10. SERVICE SETTINGS USING PASSWORD PIN 0000

Using password PIN 0000 can be applied only in special cases. In servise settings you can select type of boiler, hydraulic schema, etc. Mode for servise setting "**PIN 0000**" can be recalled by pressing "**ENTER**" button at any time, then press \blacktriangle and hold \triangleleft for 4 s. "**PIN 0000**" will appear. Press "ENTER" button 4 times. Service setting symbol will appear on the display. Press "**ENTER**" and select service operation using \blacktriangle buttons.



10.1 SERVICE SETTINGS



By pressing **"ENTER**" service settings can be recalled. Using buttons ▲ ▼ choose parameter, by pressing **"ENTER**" figure starts flashing.

WARNING

Display unit AK 4000 is used to operate all type of VIGAS boilers. It is important, that software setting is identical with boiler type. When boiler is **"OFF**" display unit shows type of the boiler compliant with boiler nominal power (pic.7/4).

For proper boiler operation, type of the boiler must be always identical with production label.

Always check if AK4000 display unit is replaced!!!

10.1.1 Boiler type setting





Offers to choose boiler type.Type of the boiler must be identical with production label. Label: V18 – boiler power, TVZ – hotair boiler, UD –

wood-coal, DP - wood, pellets, DPA - wood-pellets automatic, L - Lambda.

10.1.2 Exhaust gas thermometer option



When exhaust gas thermometer is damaged, it is possible to disconnect. It is possible to run boiler without thermometer. Water temperature will be used to shutdown the boiler.

yes – boiler with thermometer, no – boiler without thermometer

10.1.3 Discharge fan option

BH Control AK 4000	 Discharge fan is an optional accessory of the boiler. Aftre connection to the boiler and control unit AK4000 it is necessary to select option "yes". yes – boiler with discharge fan no – boiler without discharge fan
--------------------	---

10.1.4 Boiler thermometer type setting



جم ا	Offers selecting two types of boiler thermometers:		
LT 1.Standard : Type KTY			
	2.Alternative : Type PT 1000		

10.1.5 Maximum boiler temperature setting

BH Control	AK 4000		Maximum boiler temperature setting can be selected between 75 °C and 90 °C. Upper figure is used for boiler with accumulator tank.
MaxT %Hz	85°C 50Hz		

10.1.6 Power supply frequency setting

BH Control	Control AK 4000	∲ %Hz	Power supply for EU is 50 Hz ,USA and Canada use 60 Hz. If you are not aware of used frequency select AUTO. Incorrect frequency can cause time error.
Temper. unit °C			

10.1.7 Temperature unit setting



0	Temper. unit	Choose temperature unit. Option are: °C - Celsius °F - Fahrenheit
//		

10.1.8 Summer time setting



Summer ©	Offers time.	setting	of	automatic	switch	to	the	summer

10.2 MODULE SETTINGS AK 4000M

When necessary, it is possible to connect AK4000 control to the module AK4000M (pic.8). This module allows to upgrade and backup data maintenance of the boiler control unit. The module is equipped with data to make it possible to connect to BH BUS power board and USB to the PC.

BH Control AK 4000	BH Control	AK 4000 BH Control AK 4000 Config Co
BH Control AK 4000 ①->□ mon no □->AK4000S □ □	SD→ Config	To load a new configuration (connection schematic). Mainly used for systems controlled by EXPANDER AK4000E, where it is possible to load personal connection schematics.
		Currect configuration back-up. It is used for boiler monitoring. It is advised to perform before monitoring.
		To load firmware (boiler operating software).
AK4000M	SD Erase	To delete information from module AK4000M.
pic.8		Boiler monitoring - to save basic information of the boiler into memory module AK4000M. Before monitoring it is necessary to backup current configuration \mathbb{SD}_{c} and the configuration backup current configuration be realized by producer.
	SD →AK4000S	To download firmware into the power board AK4000S
	SD →AK4000EP	To download firmware to pellet expander AK4000EP

10.3 SERVICE CONTROL FUNCTIONS

In service settings the functions of each boiler's components can be checked according to the symbols indicated on the display. By selecting component and pressing "ENTER" button the function will be activated. Displayed components depend on the boiler's configuration.



10.4 HYDRAULIC SCHEMA SETTING

By modification of hydraulic schema connection will also be changed the control of the pump output and boiler configuration. Therefore, it is very important that software settings for the hydraulic schematic is identical with existing boiler installation in the central heating system. In the basic memory of the control unit are 4 basic schemas and schemas intended for operating with the Expander AK4000E. On demand, it is possible to add Expander schemes via AK4000M module (pic.8). Updated schemas for Expander AK4000E can be found on www.vigas.eu

Gasifying boilers VIGAS









10.4.1 BASIC CONNECTION SCHEMAS



Schema 0 for (basic schema/BS-1) provides reverse water temperature by thermostatic valve at 60 °C. Pumps are connected to the control unit and work in permanent mode, once boiler switched on. Water regulation is secured by 4-way mixing valve with manual control.

Contact T3 of power board AK4000S is used for connection of room thermostat.

Atttention:

Recommended schema for VIGAS 18 DPA.

Scheme 1 for (BS-3) shall be used with accumulator tank. Reverse water temperature protection secures 3-way thermostatic valve. Pump shall be connected to the control unit and works in permanent mode, once boiler switched on. Contact T3 of power board AK4000S is used to connect KTY sensor, to



monitor tank temperature.
 Attention:
 It is not possible to connect room thermostat with Schema 1. I tis recommended to control the room thermostat by pump.

Schema 2 for (BS-2) is designed for central heating system, where is protection of reverse water secured by thermostatic valve to 60°C. Pump is connected to the control unit and works in permanent mode according to water boiler temperature. To control water in central heating, the 3-way mixing valve i sused, which is operated manually.

Contact T3 of power board AK4000S is used to connect room thermostat.



BH Control AK 4000

Schema 3 is used with 3-way thermostatic valve (recommended value is 60 °C). Pump works in permanent mode. Contact T3 of power board AK4000S is used for connecting room thermostat.

Schema 4 is designed for manual control with 4-way valve. The pumps are working by pulse according to water boiler temperature. Contact T3 of power board AK4000S is used to connect room thermostat.

Recommendation: Connection of 3-way thermostatic valve does not secure sufficiently water temperature to 60°C. In order to expand the lifespan of boilers, it is recommended to use Scheme 0.

10.4.2 Connection schemas with EXPANDER AK4000E

Expander AK4000E is optional accessory for AK4000 boiler control unit. It enables the possibility to control the central heating system circuits, including regulation of supplied water temperature, using different heating sources. Usage of indoor thermostat and equithermic control (based on external temperature) or in combination, enables to control the central heating. Expander AK4000E is supplied in sets. According to the particular schematic connection, it is supplied as: basic set (code 5001), double set (code 5002) and triple set (code. 5003). After verifying the connection schemas of the Expander, service settings will be supplied with unit settings for the central heating system and hot water supply. (Detailed description given in EXPANDER AK4000E service guide or at www.vigas.eu).

Technical requirements for optional accessories:

(To specify parameters of the pump and mixing valve with servomotor consult with technician specialist)!

GAS

- 1. Pump 230V/50 Hz.
- 2. Servounit 230V/50 Hz opening period 60 240 s.
- 3. Pump to be installed cca 0,5 m after 4-way valve.
- 4. Max. el. current for one Expander 3A.
- 5. Additional thermometer install cca 0,5 m after pump.
- 6. External thermometer install on the northern side of building.
- 7. Room thermostat (Potential free contact).



Gasifying boilers VIGAS

Expander Basic set (code 5001)











Schema 5 used with one heating circuit for floor or radiator. Central heating temperature can be controlled according to external temperature, room thermostat or by combination of both. The boiler pump and central heating pump are controlled separately. Boiler protection against low-temperature corrosion provides 4-way valve with servounit. **Use: Expander basic set (code 5001).**

Schema 6 with two separate heating circuits controlled by servounit. Option to choose floor or radiator heating or combination. Central heating temperature can be controlled according to external temperature, room thermostat or with combination of both. The boiler pump and central heating pump work separately. Boiler protection against low-temperature corrosion provides 3-way thermostatic valve (60°C). **Use: Expander double set (code 5002).**

Schema 7 for (Basic scheme expander (BSE 1) used with one heating circuit controlled by servounit for floor or radiator heating. Heating of domestic water supply is controlled by pump. Temperature of central heating is controlled by external temperature, room thermostat or by combination of both. Boiler protection against low-temperature corrosion provides 4-way mixing valve.

Use: Expander basic set (code 5001) + 1 x sensor KTY (code 1104).

Schema 8 with two separate heating circuits and accumulator tank. Option to choose floor or radiator heating or combination of both. Temperature of central heating can be regulated according to external temperature, room thermostat or by combination of both. Boiler protection against low-temperature corrosion provides 3-way thermostatic valve (60 °C).

Use: Expander double set (code 5002) + 1 x sensor KTY (code 3032).

Schema 9 for (BSE-2) with one heating circuit of central heating system using servounit with accumulator tank. Heating of warm domestic water is controlled by pump. Water temperature can be regulated on the basis of external temperature, room thermostat or the combination of the two. 3-way thermostatic valve (60°C) secures the protection of boiler against low-temerature corosion.

Use: Expander basic set (code 5021) + 1x tank sensor KTY (code 3032)

10.5 INFORMATION LINE

Display information line enables indication of particular information about the AK4000 control unit system. By pressing $\blacktriangle \lor$ choose required data and press "ENTER". Marked data \bowtie will be displayed on the information line (chap.3.5).





10.6 INPUTS AND OUTPUTS ELECTRICAL CONNECTION OF CONTROL UNIT AK 4000

The control unit AK 4000 offers to view connection of both, inputs and outputs according to current configuration.

AK 4000









Press "ENTER" button and using $\blacktriangle \lor$ buttons choose required module.

/O AK4000S – power boar connection					
🗍 T1	Boiler thermometer T1				
🔨 Т2	Exhaust gas thermometer T2				
• T3	Room thermostat T3				

V prípade pripojenia "EXPANDERA" sa zobrazenie automaticky rozšíri (AK4000E1)



I/O AK4000E1 – Expander 1 connection						
□□□□□□□ 1 T2	Thermometer UK1 to T2					
⊚ <u>∭</u> 1 R3	Pump voltage UK1 to R3					
	Phase servounit "OPEN" to R1					
- ₩ []] 1 OFF R2	Phase servounit "CLOSE" to R2					

11. OPERATING INSTRUCTIONS

11.1 Prior to the boiler operation carry out necessary actions !

- Read and become fully familiar with the operating instructions, manual and the AK4000 electronic control.
- Check water pressure in central heating system (max. 3 bar).
- Check safety electrical components (safety draind valve, safety valve)
- Connect electrical components (pump, discharge fan or room thermostat, etc.)
- Check metal panel covers.
- Check power supply connection (230V/50 Hz),
- **D** Prepare a sufficient amount of fuel for the burning and heating phase.
- Check fireclay bricks and grate for pellet burning according to pic. 3, which could be out of space due to transportation Check boiler connection to the chimney

Straignten container with adjustable screws.

□ Connect boiler to power supply (230V/50Hz) – display activated.

11.2 BOILER HEAT-UP fuel "PELLETS"

- **Check if upper and botton door are shut, as well as chimney flap,**
- □ Refill the container with required amount of pellets,
- □ Set up required water outlet temperature (chap. 6),
- **D** By pressing "ENTER" switch on the boiler (chap. 4.1.1),













11.3 POWER CONTROL FUEL "PELLETS"

After pellets ignite boiler starts burning mode. This mode directly controls boiler power according water temperature on output or directly by room thermostat (if connected). Pellets are transfered through tourniquet and feeder directly to burner. Container capacity is sufficient to operate for 2 - 7 days, according to required performance. Ultrasound sensor is placed in the container to detect minimum level of pellets. Time period for automatic shutdown of the boiler ca be viewed on the display (chap.4.1.4).

WARNING !

During electricity short-cut is not possible to run the boiler. When electricity is reactivated boiler will got into automatic mode of fuel heat-up to continue its burning process. It is easy to check fuel heat-up by opening the chimney flap or through upper door. Do not forget to close after checking.

ATTENTION !

Refill container on time, to avoid complete emptying of feeder and tourniquet.

11.4 BOILER HEAT-UP fuel "WOOD"

- D prepare sufficient amount of dry wood for heat-up,
- □ open chimney flap using rod (pic.3/3),
- □ open upper door (pic.3/2) and place paper on ceramic nozzle, make sure some paper gets into bottom combustion chamber (pic.3/9), than place small timber, logs and fill up the rest of the chamber (pic.3/27),
- Close upper door and slightly open bottom door (pic.3/13) to boost heating up. (pic.3/4). If discharge fan available switch on to use for heating up,
- □ approximately after 10 15 minutes, when fire base is created, closed bottom door and chimney flap.
- □ by pressing "ENTER" boiler is "ON". Boiler starts combusting and automatically control its power according to required temperature for fuel "WOOD",
- □ do not forget to check upper door, lower door and chimney flap.

WARNING !

Do not open lower or bottom door if not necessary to avoid smoke leakage into the boiler room area. Refuel only shortly before burn-out (pic.3/4).



11.5 REGULATION AND POWER CONTROL.

Fuel inside the boiler moves gradually towards ceramic nozzle. Ash falls through nozzle and remains in combustion chamber. Boiler power is controlled automatically according to set temperature of output water. **Attention:** In case of electricity short-cut or defect of automatic control unit, it is possible to continue heating (only available for central heating systems with gravitation flow, usin fuel "WOOD"): open chimney flap and slightly open bottom door. Using this option requires often temperature checking and less fuel adding. If boiler refilled to its capacity, may cause boiler overheating easily!



11.6 REFILL THE BOILER WITH FUEL

- open chimney flap using rod (pic.3/3),
- □ by pressing "ENTER" shortly, select ",, **,
- □ carefully open upper door, to release the smoke from chamber,
- □ through upper door (pic.3/2) refill required amount of fuel,
- □ close upper door (pic.3/2) and chimney flap (pic.3/3),
- □ by pressing "⁽¹⁾ finish fuel refilling.

Wood characteristic table

Wood	Fuel efficiency [MJ/kg] 20% humidity	Fuel efficiency [MJ/kg] 25% humidity	Hardness *	weight [kg/m³] 25% humidity
Poplar	12,9	12,3	1	530
Fir	15,9	14,0	1	575
Spurce	15,3	13,1	1	575
Willow	16,9	12,8	1	665
Pine	18,4	13,6	1	680
Alder	16,7	12,9	2	640
Birch	15	13,5	2	780
Maple	15	13,6	4	660
Beech	15,5	12,5	4	865
Ashen	15,7	12,7	4	865
Locust	16,3	12,7	4	930
Oak	15,9	13,2	4,5	840





Burning base

Bottom door open



[kg/m³] = [kg/fm], fm - fullmeter, * (1 very soft...5 very hard)

Important information !!!

- Use only recommended fuel.
- **D** Do not overload the boiler with fuel during mid-season period, to avoid tar production.
- When refilling the boiler, make sure that fuel does not get between mounting and chimney flap. This would stop chimney flap from proper closing.
- □ It is important to lay wood properly, to allow proper closing of the upper door. Forced closing can damage heatproof lining.
- □ It is recommended that only person over 18 years, should operate the boiler.

11.7 BOILER CLEANING

Optimal wood burning and keeping minimum temperature of the reverse water at 60°C will ensure that the gasifying chamber and exchanger will only soot little. Using damp wood may cause water to condense on the walls of the combustion chamber, which creates tar on the surface.

Gasification chamber cleaning

It is necessary to remove tar from the gasification chamber once a week. It is recommended to burn it off with the upper door and chimney flap open. If there is extra ash which did not fall through the nozzle (pic. 3/9) into the fireclay combustion chamber, this should be removed from time to time. Fuel bunker will increase to the original size and primary air flow through nozzle will be enhanced.

□ Combustion chamber cleaning

It is recommended to sweep out ash and dust that has fallen and settled in the combustion chamber once every 3-5 days. When using pellets, clean the pellet burner once a month.



NOTICE !

Pellet burner is placed together with firebricks inside combustion chamber. Please take care for burner to be cleaned and placed to its initial space.

VIGAS 18 DPA

Exchanger cleaning

It is necessary to clean exchanger pipes once a month using the fire rake (round plate). Than remove ash from lower part of combustion chamber through bottom door.

Recommendation: If the exchanger is not cleaned regularly it will become clogged with tar. Do not use solvents. The boiler must be cleaned whilst it is hot! Heat boiler to approx 80°C (without fan) through open upper door and chimney flap. Then close the flap and door. Using gloves, carefully open exchanger cover. Clean clogged pipes with relevant accessories. After cleaning, close exchanger cover and let the boiler burn / gasify for approx. 5 hours at maximum performance, in order to get rid of any remaining tar. Avoid this situation in the future.

WARNING: Boiler room area must be permanetly ventilated at maximum during cleaning time.



12. BOILER MAINTENANCE AND REPAIRS

The contractor provides regular service and boiler maintenance. During operation it is necessary to check water pressure, door seal, chimney flap tightness, exchanger cover seal, flue cleanliness and fan performance.

Warning!

When boiler switched off at the end of heating season clean properly combustion chamber. To avoid residual humidity leave the bottom door open tohether with chimney flap. Do not leave pellets inside container and feeder to avoid wetting and desintegration.

12.1 DOOR TIGHTNESS



Door is stabilized by 3 points -2 rotary pins and door shutter. If the door is tightless, there is possibility to set by shutter or hinge side. Slightly turn hinge to release and turn hinge screw and then move door in desired direction. Number, 1" is area where gasket is joined.

12.2 CHIMNEY FLAP TIGHTNESS



When cleaning exchanger pipes (pic.3/23) make sure that flap area is clean, as well as flap itself (pic.3/15). Flap leakage can decrease boiler power. **Notification:** Flap is secured by 2 bolts with loose fitting. **Do not fasten!!!**

12.3 CERAMIC NOZZLE



Ceramic nozzle is made of special heatproof concrete designed to mix gases with secondary air to ensure ideal combustion. he nozzle is placed inside previously prepared gap. Area around nozzle is filled with heatproof concrete at the same height as the nozzle. Nozzle lifetime depends on its mechanical wear caused by fuel adding or poking the fire base. Change nozzle if necessary.



FUEL

Not recommended

Humid softwood

Very dry, hard

or

Dry softwood

Dry hardwood

small timber

Humid fuel

TURNS

0

1

2

2,5

2,5 and

more

12.4 SECONDARY AIR FLAPS SETTING



Flap position affects quality of combustion. The correct proportion between primary and secondary air is set by screws "1". Ideal set up of secondary air is 1,5 turn of screw "1". If you need to change or check setting, follow these steps:

Step 1: Loosen the bolt on screw "1"

- Step 2: Screw "1" turn all the way to the boiler body,
- **Step 3:** Loosen the screw for 1,5 turn (ideal),
- Step 4: Tighten the security bolt.



12.5 PELLET BURNER

The pellet burner is designed to burn pellets by classic combustion. The burner is made of heatproof steel. It is necessary to replace if worn out or shapeless

12.6 TOURNIQUET AND PELLET FEEDER



Chamber pellet dispenser (tourniquet) is the device designed to transfer required amount of pellets into the feeder and to create separate air space above feeder. The construction of the driver using chain transmission will avoid pellets to catch fire inside container. This design also provides easy checks and cleaning, if tourniquet is jammed with unwanted object.

12.7 AIR DISTRIBUTOR, FAN, SERVO-UNIT



Air distributor "1" together with servo-unit "3" is device designed to provide automatic air transfer created by blower fan "2" during fuel switch from "WOOD" to "PELLET" and vice versa. Servo-unit position can be view on the display \square . \square , \square , \square , \mathcal{K} . When boiler is shut down or switched off servo – unit moves to the position \square , \mathcal{K} 100% "PELLET". **IMPORTANT !** It is necessary to clean fan blades once per year!

12.8 CHIMNEY EXHAUST GAS THERMOMETER



For proper operation of exhaust gas thermometer is very important its cleanliness. When cleaning heat exchanger always gently wipe away dust from thermometer.

Important!

Thermometer must be in accurate position! Its metal ending must match with its case. (Shifting the position can significantly change displayed value of exhaust gas temperature).

12.9 CLEANING OF AIR DUCT SYSTEM

The clearness of air pipes is the basic requirement for the proper combustion of the boiler. It is necessary to clean pipe system at least once per year. The combustion takes place on the basis of primary and secondary air duct. The boiler construction allows by gradual dismatling to access all required area for cleaning.

GAS



Primary and secondary air duct cleaning:

- □ Remove front cover panel (pic. 3/8).
- **□** Remove secondary air steel plate.
- Use vacuum cleaner to clean primary and secondary air duct.
- **□** Remove and clean primary air duct.

13. ACCESSORIES AND ASSEMBLY

13.1 SAFETY DRAIN VALVE

Cooling safety exchanger usage:



1. Safety drain valve

Hole for insert
 Discharge

1



Cooling safety exchanger together with safety drain valve Honeywell TS 131 porvides boiler protection against overheating during a power cut. If forced circulation will shut down the pump and then the water flow in central heating system will stop. In case, there is no option to use automatic gravity flow or minimum 5kW consumption, boiler can overheat.

Assembly of safety drain valve TS 131:

Valve TS131 screw on to the mounthpiece "1". Safety exchanger must be water tight (closing water prior flowing). The second outlet must be directed into the drain. Insert the thermal sensor $\frac{1}{2}$ " into mouthpiece "2".

Features:

Safety drain valve opens according to boiler outlet water temperature. When the temperature reaches 95 °C, valve opens. Overflowing water from communal water supply absorbs boiler temperature and avoids overheating or possible boiler damage. This system is in accordance with standard STN EN 303-5/2012.

Notification:

- □ Safety drain valve is not part of the boiler.
- □ The assembly of the drain valve and thermal sensor is necessary to perform before the central heating system is filled with water.
- □ The pressure of cooling water should not be dependent on voltage.
- Do not loosen ¾" inserts "2", may cause water leakage. There is aluminium washer "4" with rubber insert "3", that seals copper pipe "1" inside mouthpiece "5". If water leakage occurs tighten insert ¾" no. "2".

13.2 ROOM THERMOSTAT

2



Connecting room thermostat to the boiler will provide more comfort for operator. It shall be connected to the power board unit AK 4000S. Standard version has jumper on T3 terminal. **Contact element is potential free.**

If T3 is disconnected, display shows "OFF" symbol for room thermostat. In such case, the fan will gradually shutdown. Boiler condition is indicated by symbol "—"". If the room thermostat is "ON" boiler starts again.

Attention: If the room thermostat is disconnected for more than 1 hour, blowing fan will operate at short intervals to keep firebase active.

13.3 DISCHARGE FAN



Discharge fan "2" is designed to eliminate smoke in the boiler room area during refueling VIGAS boiler. In case chimney does not comply with minimum parameters "A" a "B" it is recommended to install discharge fan. This shall be installed between chimney flue and chimney body. Fan capacitor "3" shall be mounted to the side. It shall be connected to the power board unit AK 4000S. It comes in two sizes depending on chimney diameter.

V25 (code 0507) – for VIGAS 16,18DPA, 25, 29 UD. V80 (code 0508) – for VIGAS 40, 60, 80, 100.

BOILER TYPE	Min A	Min B
VIGAS 16, VIGAS 18 DPA, VIGAS 25, VIGAS 29 UD	8 m	160 mm
VIGAS 40	8 m	200 mm
VIGAS 60, VIGAS 80, VIGAS 100	12 m	200 mm
Drawing with parametres V25 a V80 available at: www	<u>w.vigas.eu, w</u>	<u>ww.vimar.sk</u>

13.4 CIRCULATION PUMP AND 3-WAY THERMOSTATIC VALVE



The basic version of electronic control unit without expander allows to connect pump with AK 4000S power board. The operation of pump depends on selected hydraulic schema and boiler temperature. Using two methods of pump control, by pulse or permanent running.

Pulse running allows the pump to go on and off within specific time interval. Pump activity depends on the boiler output temperature. The main advatage is protection of the boiler against low-temperature corrosion.

Permanent running is used with 3-way thermostatic valve or Ladomat installation. See chap. 10.4.

The pump operation is indicated by a flashing symbol on the display.

14. LIST OF SERVICE CENTERS

In order to maintain quality and safety it is recommended to carry out boiler repairs by authorized service technician appointed by producer:

Pavel Vigaš - VIMAR, Príboj 796, 976 13 Slovenská Ľupča, Slovakia.

tel. 00421 48 41 87 022. tel. 00421 48 41 87 159 email: <u>vimar@vimar.sk</u>

Current list of sales and service centers can be found on the website: www.vimar.sk , www.vimar.sk , www.vimar.sk , www.vimar.sk)

15. PROBLEMS, CAUSES AND SOLUTIONS

Problem	Cause/ Solution		
During heating season boiler power	Used fuel was too humid.		
decreased from previous period.	Clean pipes airway system. See chap.12.9.		
	Clean fan blades. See chap.12.7.		
When chimney flap closed, boiler does not	Small amount of primary air. Clean primary air system.		
perform and smoke appears.			
Combustion chamber contains large	Nozzle hole enlarged. Replace nozzle. Check secondary air		
unburned pieces of wood.	flaps. See chap.12.4. Decrease the temperature 🕂 end.		
	See chap. 5.3.2.		
Leakage of smoke after the door is closed.	Insufficient tightness of the door. Adjust the door. Check door tightness. Door seal needs to be reversed or replaced.		



operating
ee chap.
ider than
ge fan is
sification
nected to
onnected
gear. See
ider ge fa isifica

Error notification	Error identification	Cause/ Solution
Error Tmax		When temperature drops below
Display shows "MAX" if boiler		desired temperature boiler starts
exceeds set temperature over 10 °C.		running again.
Red control LED indicator		
Open door		Security door contact.When open
^{10:59} (1 59.7°C		boiler shuts down. See contact
		D – D of wiring diagram
DOOR		AK4000EP.
		Contact not used.
Red control LED is flashing		
Overheated gearbox		Overheating the motor gearbox
		above 80 °C will shut down the
1 59.7 C		boiler. Check tourniquet, feeder
!! <u>\\</u>		against latching, etc.
a 1		
Red control LED is flashing		
STB error		Boiler overbeated – when boiler
		temperature drops down reset
		STB manually. See chap. 9.1.
Red control LED is flashing		
Interrupted fuse 3,15A		Interrupted fuse 3,15A, which
10:59 11 59.7°C		connects boiler pump.
		Check pump connection
!!!肩頭 ♥!!!		
Ded centrel LED is fleebing		
Red control LED is hashing		
Pellet ignition error		Clean burner (pic.3/24) large
23:27 🔏 102.8°C		amount of ash inside burner
		Check pellet level inside
!! •¥ 🛞 Error !!		container
		Check ignition coil function
		(picr.3/35)
Red control LED is flashing		

Gasifying boilers VIGAS





16. ASSEMBLY REGULATIONS

16.1 ASSEMBLY AND INSTALLATION INSTRUCTION

- **D** Boiler can only be connected to the heating system with relevant thermal output capacity
- □ When using enhanced circulation, central heating system must offer option, in case of a power cut (shutdown boiler and pump) to ensure boiler minimum power at 5kW. This is provided by safety cooling exchanger together with Honeywell drain valve TS131.

Drain valve Honeywell TS 131 is additional component, it is not part of the boiler.

□ In case, boiler is installed with accumulator tank, the minimum tank volume is calculated according to STN EN 303/5:2012 as follows: V_{sp} = 15T_B x Q_N (1 – 0,3Q_H/Q_{min})

V _{sp} – volume of accumulator tank [L]	Q _N -	nominal heating power [kW]	T _B – combustion interval [hours.]
Q _H – required boiler power - heating area [kW]	Q _{min} -	minimum heating power [kW]	

- □ Minimum recommended volume of buffer tank for VIGAS 18 DPA is 500 L.
- □ Boiler must be connected to the chimney correctly and shortest way. Chimney should not be occupied by any other devices. Chimney venting must be in accordance with STN 734201 and STN 734210.
- □ We do not recommend permanent connection to the water supply through inlet valve, in order to avoid increased pressure in the system. Maximu overpressure is 0,3 MPa.
- □ Boiler room must be properly ventilated.

- **D** Boiler assembly and installation must be carried out by authorized technician.
- **D** Boiler must be commisioned by authorized trained technician.
- □ Boiler does not require separate solid base.
- Minimum temperature of reverse water returning to the boiler shall be 60 °C. This condition shall be secured by thermostatic or thermoregulatory valve. Recommended manufacturer is ESBE: Type VTC312 (G1") up to 30kW boiler, type VTC512 (G6/4") up to 150kW boiler performance
- Boiler room must be permanently ventilated through min. 0,025 m² slot. Diameter for inlet and outlet must be similar.
- Boiler must be installed in the basic, usual surrounding in accordance with STN 33 2000-3.
- □ It is advised to follow saftey and health regulations in accordance with current requirements notice no. 718/2002 Statute.
- □ It is strictly advise to follow required standards regarding flammability level of materials surrounding the boiler according to standard STN 73 0823:1983/z1 Flammability degree of building materials.

16.2 ELECTRICAL EQUIPMENT CONTROL AND MAINTENANCE SAFETY REGULATIONS

The boiler operator person must follow relevant regulations and standards, as well as the following rules: While boiler in service, none of the following actions may be carried out.

- DO NOT uncover the electronics, fan, thermostat.
- DO NO change the fuse.
- DO NOT repair damaged cables or insulation.
- □ Maintenance and repairs to the boiler with uncovered electrical equipment may only be done by authorized person, according to notice no. 74/1996 Statute.
- Before any interference with electrical equipment, it is necessary to unplug and disconnect power cord. Connection to power supply is only allowed after all cover panels are mounted back on the boiler.
- □ If any defect of electrical equipment occurs or boiler insulation is damaged, it is advised:
 - DO NOT touch any part of the boiler.
 - IMMEDIATELY unplug and disconnet the boiler from power supply.
 - TO CALL authorized technician in order to remove failure.

Except basic maintenance, it is strictly forbidden:

- **D** To carry out any work on electrical equipment while boiler is plugged in.
- **T** To touch defected electrical equipment, mainly damaged wire insulation, etc.
- □ To operate boiler while uncovered.
- **T** operate boiler with any defect on electrical equipment or installation.
- □ To repair damaged electrical parts of the boiler by person other than authorized and appointed by producer.



16.3 Recommended basic schematics with AK 4000 control.







1. Boiler VIGAS
2. Safety elements
3. Room thermostat
4. Pump
5. Domestic water tank
6. 4-way valve
7. Heating circuit
8. Expansion tank
9. Drain valve Honeywell TS 131
10. Discharge fan
11. Thermostatic valve ESBE VTC 312, VTC 512
12. 3-way mixing valve
13. Accumulation tank
M - Servo-motor unit
T - Thermometer KTY
TE – External thermometer KTY
TP – Pump thermostat

16.4 Recommended basic schematics with AK 4000 control + Expander AK4000 Basic set.







17. WIRING DIAGRAM CONNECTION

no.	Description	Code	
1	AK 4000D Display	4001	•
2	AK 4000SL Lambda board	4003	•
3	Fan EBM 108	0514	•
3a	Capacitor	0515	•
4	STB fuse 100 °C	3029	•
5	Boiler sensor UNI type KTY	3026	•
6	Gas sensor type PT 1000	3027	•
7	Ultrasound receiver	4010	•
8	Ultrasound transmitter	4011	•
9	Motor sensor type KTY	1104	•
10	Container sensor type KTY	3032	
11	Discharge fan	0507	
12	Expander AK4000	SET	
13	Memory modul AK4000M	4007	
14	Room thermostat	3030	
15	Ignition coil	0638	•
16	Motor + gear box TTM 203	0640/A	•
17	Pellet. EXPANDER AK4000EP	4009	•
18	Servounit Belimo 24V	3008	•
K1	Power cord EU	3025	•
K2	Fan cable	3010	•
K3	Cable set for STB fuse	3015	•
K4	Sensor connection modul	3022	•
K5	Main ground wire	3018	•
K5a	Ground wire for control panel	3019	•
K6	Communication wire AK4000D	4006	•
K7	Ignition coil cable	4014	•
K8	Cable motor + gear box	3013	•
K9	Power cable AK 4000EP	4012	•
K10	Communication cable AK4000	4015	•
K11	Cable set for power supply	4005	•
K12	Cable for servounit Belimo	3013	•



VIGAS 18 DPA



Re	cords of electrica	I device connection	ons (pump, discha	arge fan, room
		thermostat, expa	inder, etc.)	
Date	Device	Service technician name	Certificate no.	Technician signature
	Records	of warranty and a	fter warranty serv	ice
Date	Service protocol number	Service technician name	Certificate number	Technician signature
Notes				

The list	of most frequently used spare parts for VIGA	AS 18DPA	(use "Code" when ordering)
Code		Code	
0102	Ceramic nozzle (3-hole) LAC pic.3/9		
0104	Fire clay brick P4 (for iron ash) pic.3/12		
3008	Servo Belimo 24V pic.3/39		
0401	Gasket / Door seal		
0405	Heat exchanger seal		
0516	Fan EBM 108 pic.3/7		
0601	Handle (complete)		
0633/A	Burner 18 DPA (refractory steel) pic.3/24		
0634/A	Tourniquet blades pic.3/33		
0636/C	Feeder device 18DPA complete		
0637/A	Feeder device pic.3/32		
0638	Ignition coil pic.3/35		
0640/A	Motor + gearbox TTM 203 pic.3/34		
0641/A	Gear wheel (11z, 2x 32z)		
0660/B	Chain for pellet boiler short (40 cells)		
0660/C	Chain for pellet boiler long (42 cells)		
0677	Fric. bearings EFOM Ø16 container,tourniquet		

LETTER OF WARRANTY Certificate of Quality and Completeness

Product

VIGAS 18 DPA

kW

Serial number :

Producer confirms, that boiler complies with standards, STN EN 303-5:2012, STN EN 61010-1+A2:2000, STN EN 50081-1:1995, STN EN 50082-1:2002, STN EN 61000-3-3:2000, STN EN 61000-3-2:2000+A1+A2:2001.

Date of production control

	Stamp and signature of producer
Date of purchase	
Date of commission	
	Stamp and signature of seller
VIGAS com	mission certificate
Product	VIGAS 18 DPA kW
Serial number	
Date of purchase	Date of commission
Date of purchase	Date of commission
Date of purchase	Date of commission
Date of purchase	Date of commission

User name and address :

Instruction and warranty condition for customer:

- Claims regarding delivery completeness must be in accordance with Commercial law and Civil law of the supplier
- Damage and defects during transportation must be claimed by buyer to the carrier at the time of delivery.
- □ Warranty period is 24 months from the date of purchase.
- □ Warranty is valid only if the boiler is commisioned by an authorised technician.
- Warranty is valid only if the electric equipment is added according to regulation by authorized technician and recorded in relevant documents of connected devices.
- □ Warranty applies only to the boiler construction, used material and complete boiler unit.

Warranty does not apply:

- Consumer material: gasket, exchanger seal,under fan seal, ceramic nozzle, heatproof lining and fire clay bricks.
- □ Defects caused by customer.
- Defects caused by incorrect assembly, improper operation or maintenance, or if the boiler is used for any other purpose as specified by producer.
- □ Otherwise to claim quarantee applies by relevant provision of Civil law.

Producer reserves the right to make changes under the product innovation.



Following operations were performed during commissioning:

- □ Thorough explanation of the boiler maintenance and service.
- **D** Boiler check before heating.
- Provided burning test.
- □ Complete and confirm data of warranty certificate.

Boiler user signature

Stamp and send to producer !!

39



Serial number



Gasifying boilers

Producer: Pavel Vigaš - VIMAR M. Čulena 25 974 11 Banská Bystrica SLOVAKIA

Production plant:

Pavel Vigaš - VIMAR Príboj 796 976 13 Slovenská Ľupča SLOVAKIA tel.: 00421 48 4187 022 fax: 00421 48 4187 159

WWW.VIMAR.SK WWW.VIGAS.EU vimar@vimar.sk

